

END CAP PANEL ASSEMBLY GUIDE



Intertek

Sanitation Listed
Certified to NSF/ANSI 2 by Intertek

-Size of parts will differ depending on customer's order.

-Quantity of parts might differ depending on customer's order.

NEED:




Two people
needed
PARTS LIST




Utility
Gloves





(Plastic Cover)

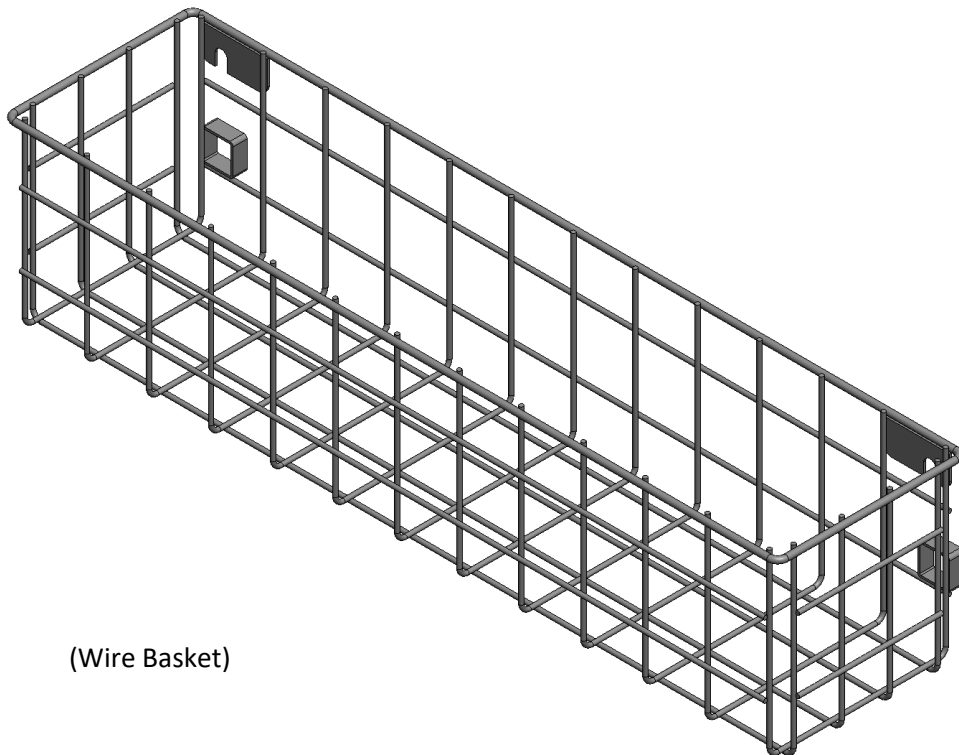

(Wire Basket)

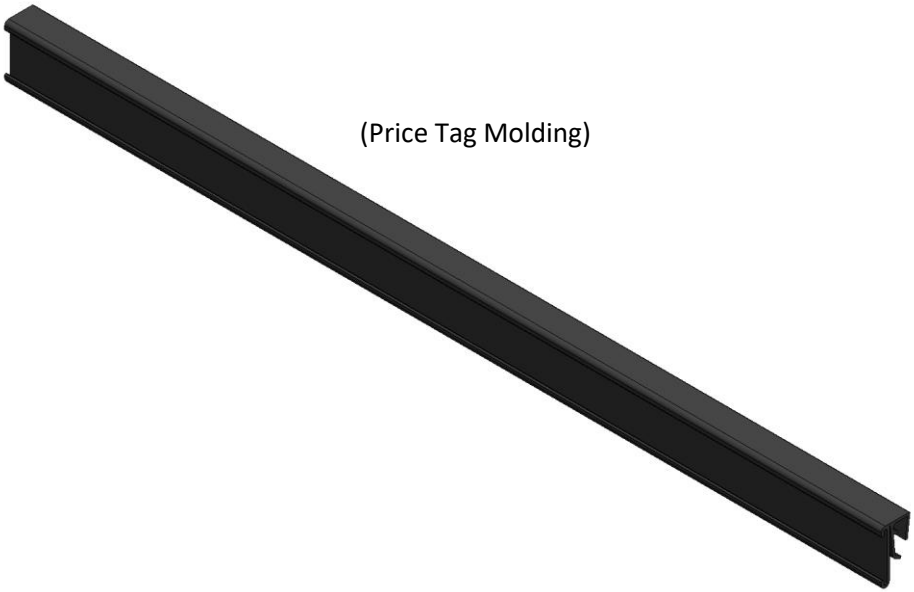


(Price Tag Molding)

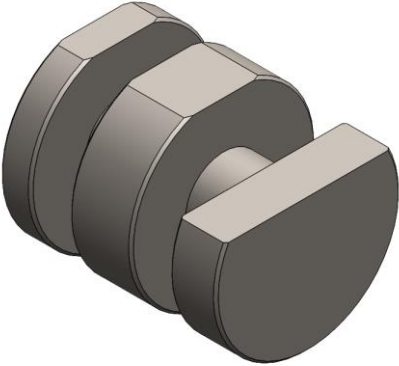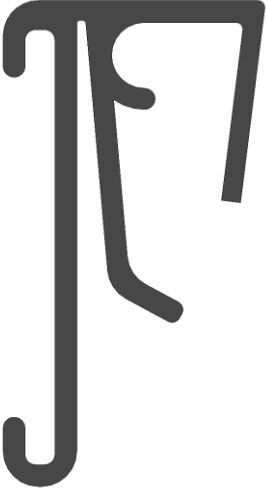


(Shelf Clamps)



Step 1: Stick the plastic cover by using the double stick tape attached, at the end of the door run on the upright, the plastic cover must be between the keyhole channels to allow the installation of the baskets. The plastic cover height is sufficient to cover from floor to the top of the upright (Flush).

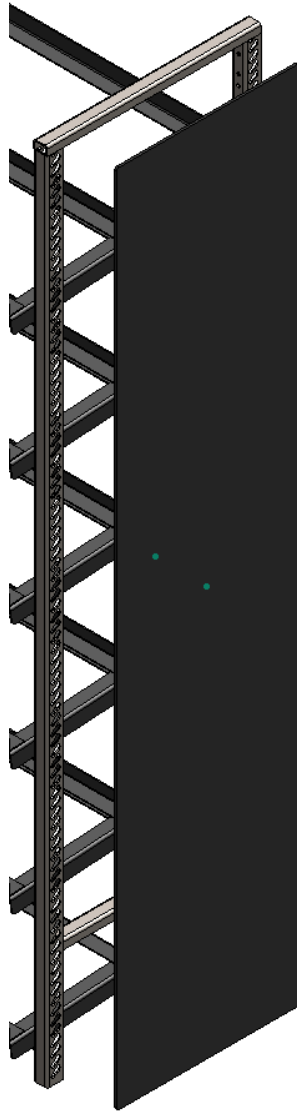



Step 2: Install the clamps on the baskets before installing them on the upright.

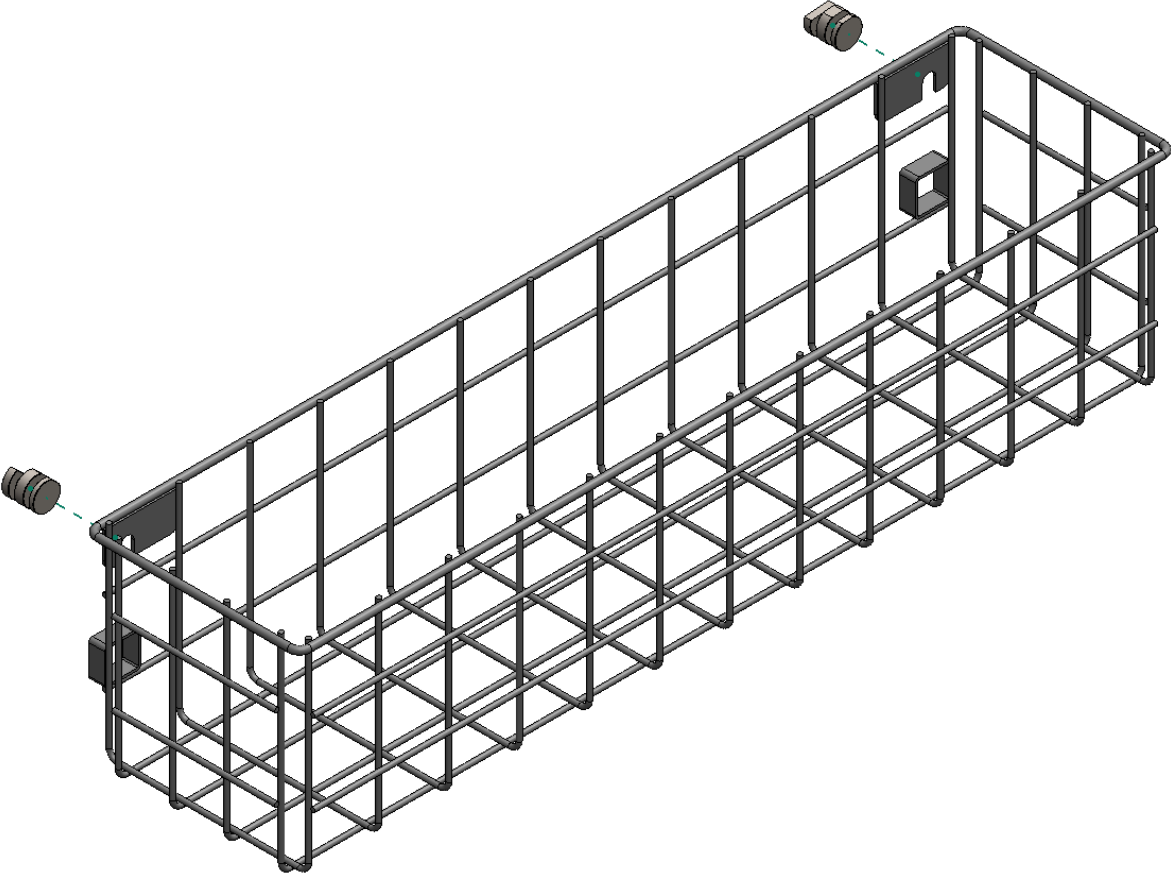


Step 3: Install the Baskets with clamps on the upright, both clamps of each basket have to be installed at the same level or height to keep the basket flush.

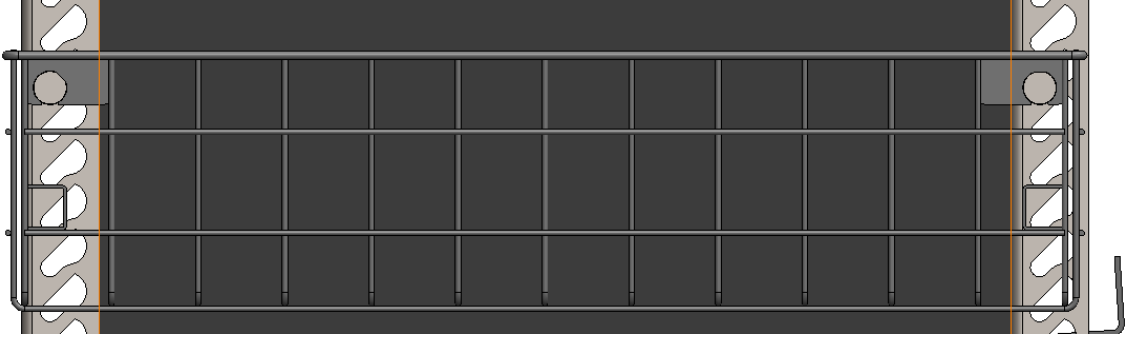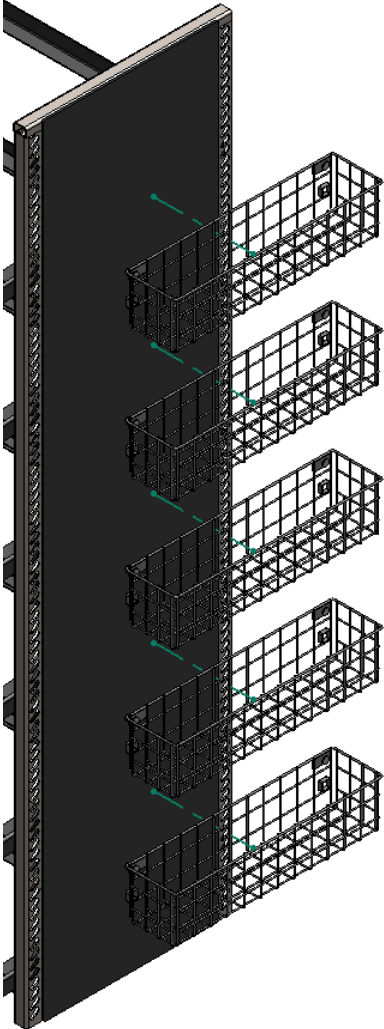

Step 4: Install PTM on the front of the baskets.

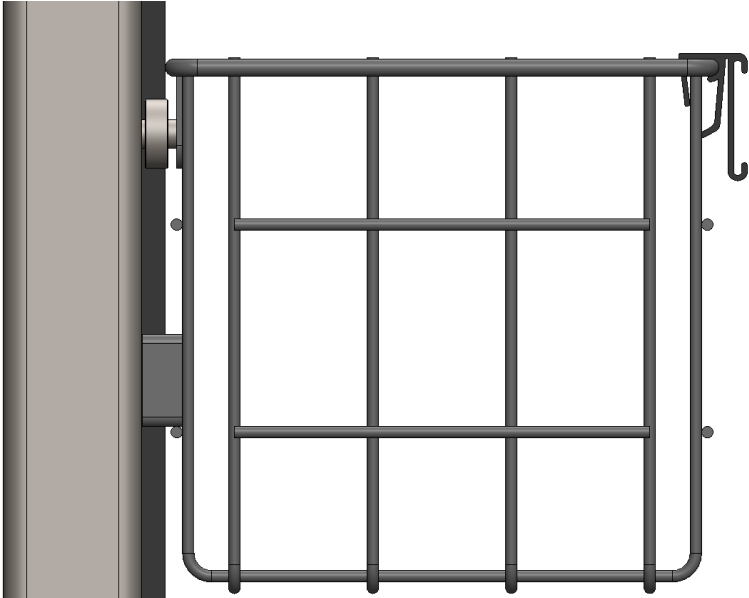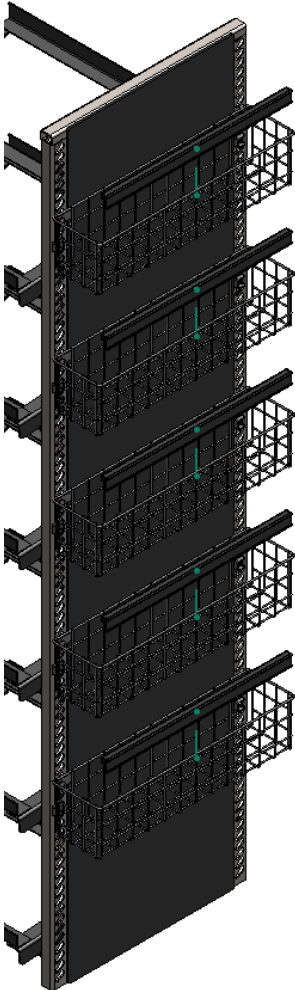

Completed Assembly:

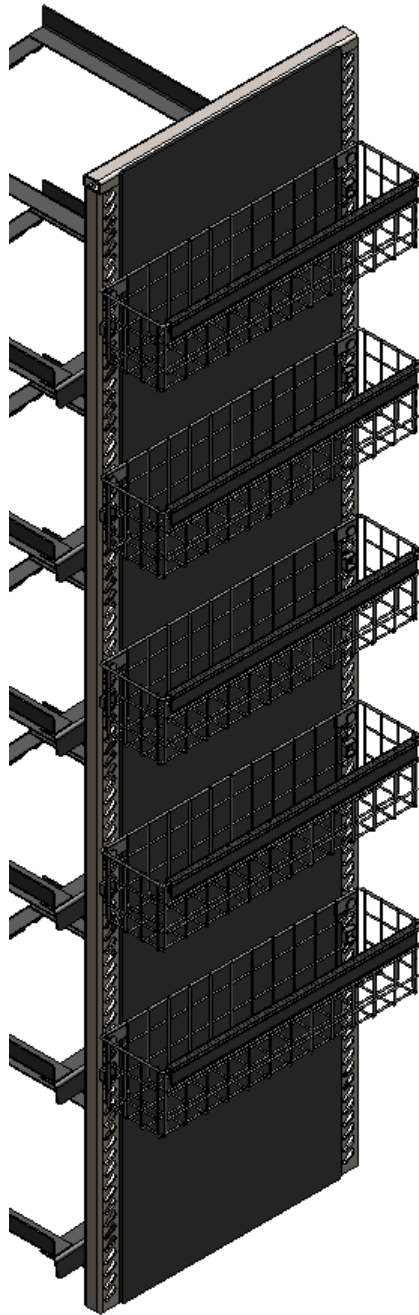

Questions?

Call Customer Service...800-323-2517